


REMOTE CONTROL HA 51R

Additional remote controls can be acquired separately if necessary, and are usable with your system unbounded of quantity.

- The remote control must be supplied with an alkaline pile of 12V.
- To dismount the lid while removing using a small screwdriver cruciform the screw located on the lower part of the case of operate by remote control.
- To insert the pile 12V in its housing while taking care to respect polarity.

Adjustment of the remote control

- To carry out then the adjustment of the code of radio communication on the remote control, by regulating the same sequence ON/OFF on the microswitches from 1 to 8 as that regulated on infra-red detectors HA804P and magnetic detectors HA804M.
- To give the lid of the remote control then.

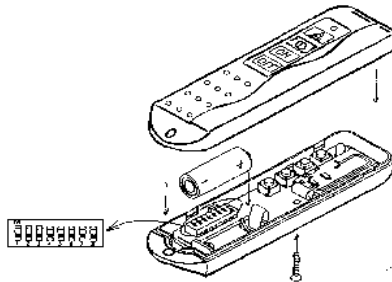

IMPORTANT: In the event of loss d' a remote control, take care to change immediately the code of radio operator communication of the system so d' to eliminate all d' risks; intrusion.

Frequency of operation 433 MHz

Crush 12 V format: MN21 12V