

## HOW TO PROGRAMME YOUR REMOTE CARDIN S449



In order for your new remote to work, it must be programmed.

It can be programmed using another remote that has already been programmed, or using a radio receiver.

### **Programming using another remote**

- 1- Take a remote that has already been programmed, and the new remotes.
- 2- Stand near to the device that uses the remote (within the field of the receiver).
- 3- Take the old, programmed, remote:
  - with a pointed object, press the hidden button (the little hole on the remote).  
The receiver will emit a short bleep.
  - press one of the buttons on the old remote.  
The receiver will emit another short bleep: for 5 seconds it will be in “memory” mode
- 4- Take one of the new remotes and press the button to be memorised.  
The receiver will emit two short bleeps, indicating that the new remote has been programmed.

You can then register several other remotes.

Attention: after 5 seconds of inactivity, the receiver will emit a long bleep indicating that it is no longer in “memory” mode.

### **Programming using the receiver**

- 1- Open the box containing the receiver.
- 2- On the radio card, hold down the “MEMO” button. A light will come on and flash slowly.
- 3- Keeping it held down, take one of the new remotes and hold down the button to be memorised. The light will go out.
- 4- Release the “MEMO” button and the button on the remote.  
The light will begin flashing again.
- 5- Press the same button on the remote again.  
The light will go out to confirm that the remote has been programmed.
- 6- Repeat the process for each button and/or remote you wish to programme.