

Central Remote control WisDom.



Transmitters

To enter the Transmitting menu, you must:

From the principal menu, to press on the key [7] to reach under menu Transmitters or to use the keys

Radio operator button
1) Attribution button R



and  until you arrive under Emetteurs menu and to press then on the key . The following text is posted with the keyboard:

Radio operator button
1) Attribution button R

You are now in the menu Emetteurs and you can reach under menus available.





Transmitters: To see

This procedure is required when you wish to use a transmitter with code changing “rolling codes”.

To enter small the Lira, you must:

1. You find in the Emetteurs sub-menu.
2. In under menu Transmitters, to press on the key [1] to reach small the Lira. The following text is posted with the keyboard:

Attribution B. Radio:
Select=1 (1-8)

3. To enter the number of the transmitter that you wish to program in WisDom and confimer with the key .
4. To select the desired option:
 - ❖ Press on the fast key [1] to continue with another transmitter.
 - ❖ To press on the key [2] to program the code of the transmitter desired in the receiver in wire. Send for that a signal of training (endéans 255 seconds) of the transmitter to be programmed while pressing during at least 2 seconds on the key  (ARM) of the transmitter. When one presses on a little transmitter, the LED of the transmitter flickers. In the event of success of the sequence of programming of the transmitter, WisDom gives a short beep of confirmation.
 - ❖ Press on the key [3] to erase receiver of WisDom the code of a transmitter without wire (for example in the case of the loss of a transmitter). Select the choice [J] or [N] via the key  and confimez with the key .