 


# Programming Manual


## BFT Clonix 2E

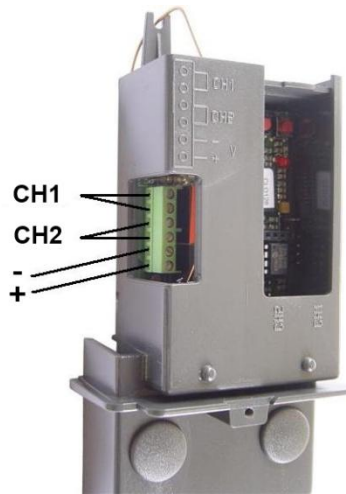

Assembly of your receiver:


1. Unplug your motor. Verify that you have a 12V or 24V feed with an alternating or direct current. Connect the feed between the “-” and “+” terminals (you don’t have to respect any direction if the feed is alternating). If the feed is stronger, you will have to install an adapter.
2. Connect the first channel between the CH1 terminals.
3. Connect the second channel between the CH2 terminals.

Please note: there are several ways to connect your receiver, either as a replacement for an old receiver (check the compatibility of your remote controls with your new receiver), or in parallel with the current receiver (example):

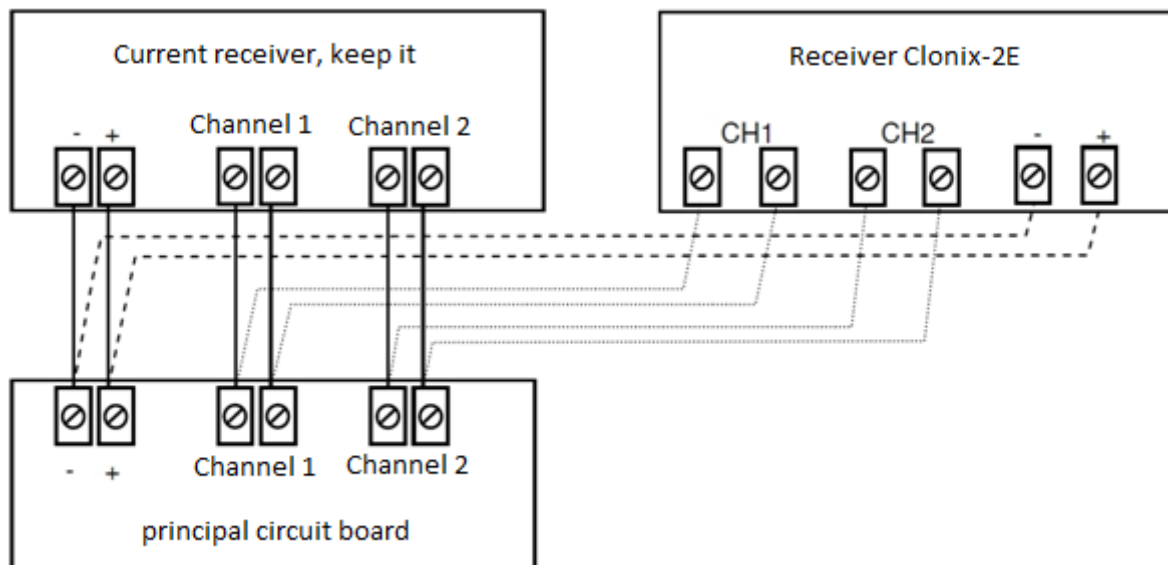

4. Your new receiver is programmed.

Programming of your new remote control:

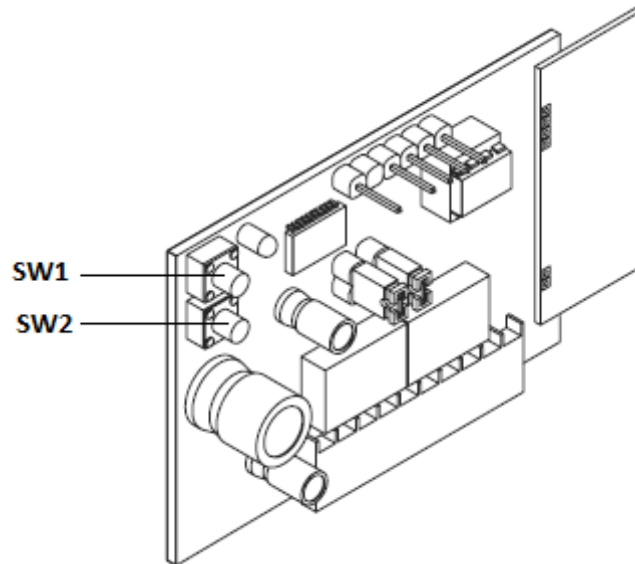

1. Open the casing of your receiver.
2. On the receiver circuit board, press the SW1 button. Let it go. The Led light of the receiver blinks.
3. Press both buttons on your new remote control (both superior buttons if your remote control has 4 buttons) until the LED light of the receiver illuminates fixedly.
4. Press the first button on your new remote control until the LED light of the receiver blinks again.
5. The Led light of the receiver turns off.
6. The first button of your new remote control is programmed.
7. Repeat this procedure to program the second button of your new remote control. Use this time the SW2 button on the circuit board of the receiver.