

## Programming Manual

### APRIMATIC TX2M - TX4M - TR2 - TR4




#### Programming of your new remote control:

There are several methods for programming your new remote control.

#### From a remote control that has already been programmed:

1. Approach your motor so you are standing a few feet away from it.
2. Press all buttons on the remote control that has already been programmed at the same time. Let them go. The receiver emits a beep.
3. Simultaneously press all buttons on your new remote control. Let them go. The beep stops. Wait 2 seconds. The beep starts back up.
4. Press a button on your new remote control. Let it go.
5. The beep stops. Wait 2 seconds. The beep starts back up.
6. Wait 10 seconds. The beep stops.
7. Your new remote control is programmed.

#### From the receiver:

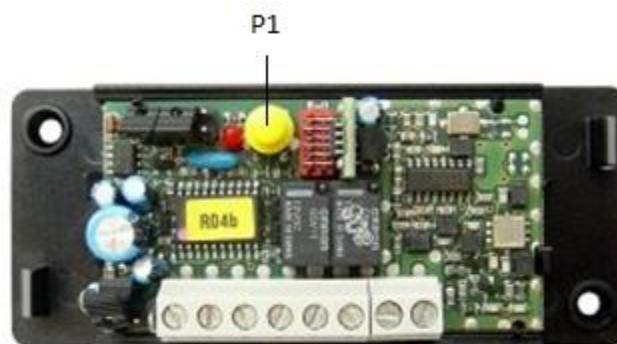

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (P1). The LED light of the receiver illuminates.
3. Press a button on your new remote control for 2 seconds.
4. Wait 15 seconds. The receiver LED light turns off.
5. Your new remote control is programmed.