


BENINCA IO

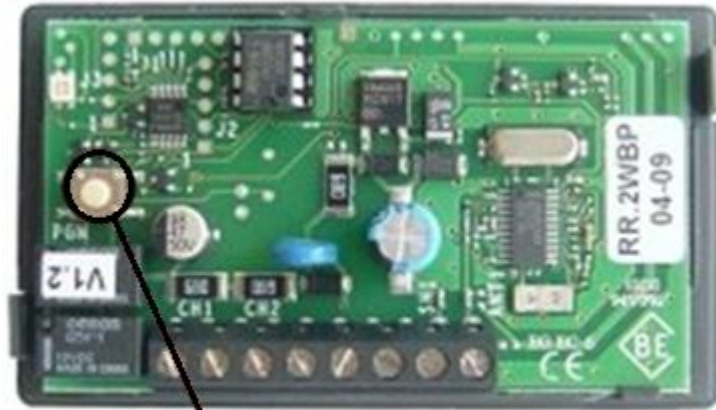

PGM

fig 1

Programming of your new remote control:

Please note: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button (fig 1, PGM). Let it go. The receiver LED light illuminates.
3. During the next 10 seconds, press a button on your new remote control. Keep it pressed down. The receiver LED light blinks. Let the button go.
4. Wait 10 seconds.
5. Your new remote control is programmed.