


Programming Manual

CAME TCH 4024 - 4048

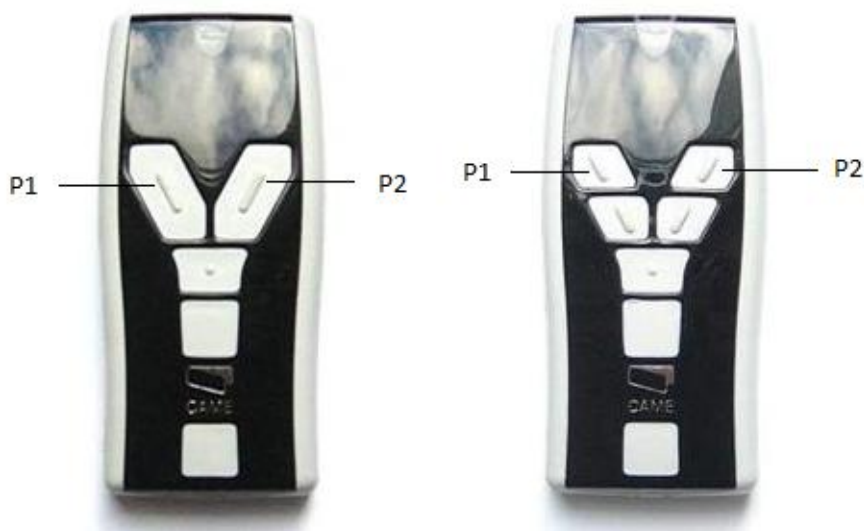

Programming of your new remote control:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of 10 small programmable switches, numbered 1 to 10. They are in the ON or OFF position. The positioning of these small programmable switches determines the system programming code. Please make a note of these positions in the following table :

1°	2°	3°	4°	5°	6°	7°	8°	9°	10°

3. Press simultaneously both buttons from your new remote control (P1 and P2). The LED light blinks slowly and then faster. Let the buttons go.
4. Press the button you wish to program on your new remote control. Let it go.
5. During the following 10 seconds, enter your programming code in the following manner :
 - the left button on the remote control corresponds to the OFF position of the internal programmable switches (P1)
 - the right button on the remote control corresponds to the ON position of the internal programmable switches (P2)

For the remotes control TCH 4048 use the top buttons.

As you set the position of the last switch, the LED light blinks three times.

6. Repeat this procedure for each button you wish to program.
7. Wait 10 seconds.
8. Your new remote control is programmed.