


Programming Manual

CAME Top 302A - Top 304A

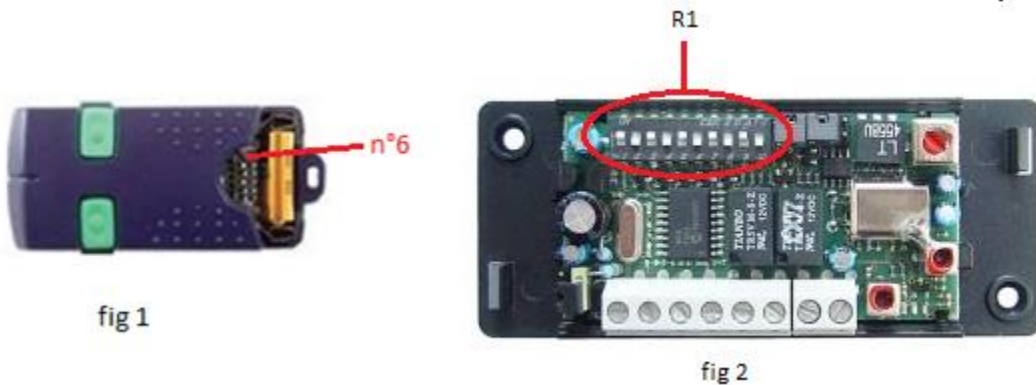

Programming of your new remote control :

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, you will see a row of 10 small programmable switches, numbered 1 to 10. They are in the ON or OFF position (R1, fig 2). The positioning of these small programmable switches determines the system programming code. Please make a note of this positioning in the following table :

1°	2°	3°	4°	5°	6°	7°	8°	9°	10°

3. Open the casing of your new remote. You will see a row of 6 small programmable switches, numbered 1 to 6.
4. Put the programmable switch number 6 of your new remote control in the ON position. (fig 1)
5. Enter your programming code in the following manner :
 - The left button of the remote control corresponds to the OFF position of the internal programmable switches
 - The right button of the remote control corresponds to the ON position of the internal programmable switches.
6. As you set the position of the last switch, the receiver emits two beeps.
7. Put the programmable number 6 on the OFF position again. Only the switches number 3 and 5 must remain in the ON position.
8. Your new remote is programmed.