

Programming Manual

CARDIN SSB T9K4



Programming of the keyboard on a receiver or on an electronic programmer:

Connect the battery cable to the inside of your new code keyboard.

Modifying the password:

The original password is "123456".

1. Enter the following sequence on your keyboard: **your previous password*. The keyboard emits a small beep and the red and green LED lights go on.
2. While the red LED light remains lit constantly and the green LED flashes, enter your new password (maximum 6 digits) and finish with *. The keyboard emits a beep and the red and green LED lights remain lit constantly.
3. The modification of your password is successful.

Complete deletion of the memory:

1. Enter the following sequence on your keyboard: *##password*. The keyboard emits a beep, the red and green LED lights flash. The keyboard emits a second beep and the green LED lights up.
2. Your keyboard's memory has been deleted (except for the password).

Saving a personal code:

1. Enter the following sequence on your keyboard: password*. The red and green LED lights flash, the keyboard emits a beep and the red LED lights up alone.
2. Enter your new personal code and finish by entering *. This new code must be different from your password. The keyboard emits a beep and the red and green LEDs light up.
3. In the following 10 seconds, press one or several of the functions A, B, C or D depending on the button you use on the remote control that is already programmed.

Programming Manual



4. Confirm by pressing *. The red LED lights up.
5. Press #. Your personal code is saved.

Programming with the receiver:



1. Open the receiver box. It is located next to your motor.
2. On the receiver circuit board, press the programming button "MEMO". Keep it pressed down. The receiver LED lights up and flashes.
3. Press your personal code on the keyboard and finish by pressing *. The keyboard LED flashes and lights up.
4. Press the button of the channel that you wish to program on the keyboard (A , B, C or D) relating to the button that you use on your already-programmed remote control :



5. The keyboard LED flashes. Press a second time on the same button on the keyboard (A, B, C or D). Let the "MEMO" button in the receiver go.
6. Your keyboard is programmed. It works when you enter your personal code and finish by pressing *.