


## Programming Manual

### KING GATES Kit FRED Myo 2 – Myo 4C

Connecting the receiver to the motor:

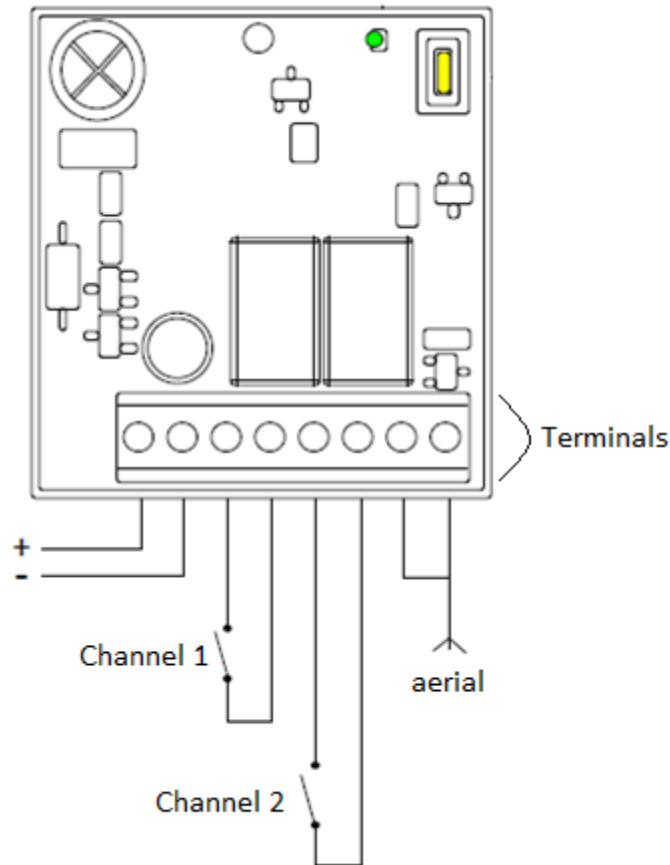


1. Cut off the electricity of the installation.
2. Open the casing of the receiver and spot the row of screws corresponding to the terminals. Do the same on the circuit board of the motor.
3. Connect electric wires between the + and – terminals on the receiver and between the + and – terminals on the motor (the + on the + and the – on the -). To connect a terminal, you must insert an electric wire in the hole under the screw and then screw it to lock the wire.
4. Similarly, connect the terminals of the first channel of the receiver on the first channel of the motor and the second channel of the receiver on the second channel of the motor.
5. Finally, connect the aerial wire.
6. Your receiver is connected.

Note: there are two ways to hook up a receiver to an already-existing installation.

- As a replacement for the actual receiver: the old remote controls won't work anymore if they are not compatible with the new receiver.
- By installing the new receiver in parallel to the actual receiver (see diagram below). Both types of remote controls will work with the installation.

Programming of your new remote control:

With the receiver:

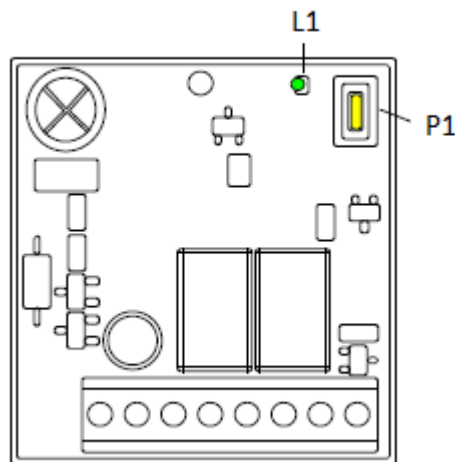

1. Open the casing of your receiver.
2. On the receiver circuit board, press the programming button P1 once to record the button on the first channel. Let it go. The LED light L1 illuminates.
3. In the next 5 seconds, press the button you wish to program on your new remote control. The LED light blinks once.
4. Wait 10 seconds.
5. The button is programmed.
6. Repeat this procedure to program a button on the second channel of the receiver by pressing this time the button P1 twice.

With an already-programmed remote control:

1. Press the button you wish to program on your new remote control for 5 seconds. The LED light on your new remote control blinks.
2. Approach your new remote control and the already-programmed remote control.
3. While keeping the button on your new remote control pressed down, press the same button on your already-programmed remote control.
4. The LED light on your new remote control blinks fast.
5. Wait 10 seconds.
6. Your new remote control is programmed.

## Erase one remote control:

1. On the receiver circuit board, press the programming button P1 three times. The LED light L1 illuminates.
2. In the next 5 seconds, press a button on the remote control you want to erase. The LED light blinks.
3. Wait 10 seconds.
4. Your remote control is erased.

## Erase all the remote controls:

1. On the receiver circuit board, press the programming button P1 three times. The LED light illuminates then blinks. Keep the button pressed down until the LED light illuminates fixedly.
2. Wait 10 seconds. The LED light turns off.
3. All your remote controls are erased.