


MARANTEC D343 – D344

Connection of the receiver to the motor:

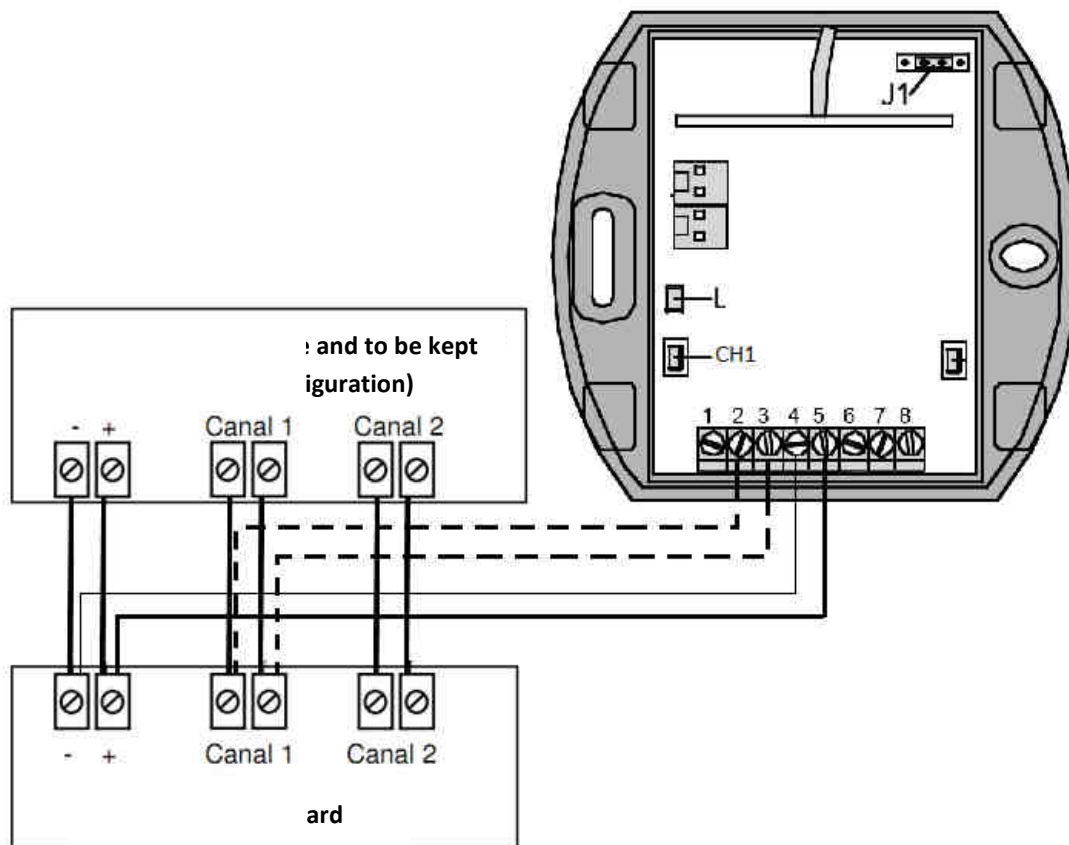

1. Unplug your motor.
2. Check that your receiver is supplied with a 12V or 24V power supply. If the voltage delivered by the circuit board of your motor is greater (for example, 220V), you will have to install a transformer.
3. Make the following connections with the electrical wires as indicated in the diagram above:
 - Connect channel 1 between terminals 2 and 3 on the receiver (you have to insert the wire in the hole under the screws and then screw them to lock the wire).
 - Connect channel 2 between terminals 7 and 8 on the receiver (for more clarity, the connection of this channel is not displayed in the diagram above).
 - Connect the terminal + of the motor (or terminal with a tension indication) to terminal 5 on the receiver.
 - Connect the terminal – or GMD of the motor to terminal 4 on the receiver.
4. Your receiver is connected.

Programming of the first remote control with the receiver:



1. Open the casing of your receiver.
2. On the receiver circuit board, press the button CH1. Let it go. The LED light L1 blinks.
3. Press a button on your new remote control. Keep it pressed down. The LED light L1 illuminates fixedly. Let the button on your new remote control go.
4. Wait 10 seconds.
5. Your new remote control is programmed.

Programming of the following remotes:



1. Connect the old and the new remote control with the supplied broach (diagram above).
2. Press a button on your old (or already-programmed) remote control. Keep it pressed down. The LED light on your old remote control illuminates.
3. While keeping the button on your already-programmed remote control pressed down, press the button you wish to program on your new remote control. Keep it pressed down. The LED light on your new remote control blinks and then illuminates fixedly. Let the buttons go.
4. Repeat this procedure for each button you wish to program.
5. Wait 10 seconds.
6. Your new remote control is programmed.