


Programming Manual

PRATEL MR2E – MR4E

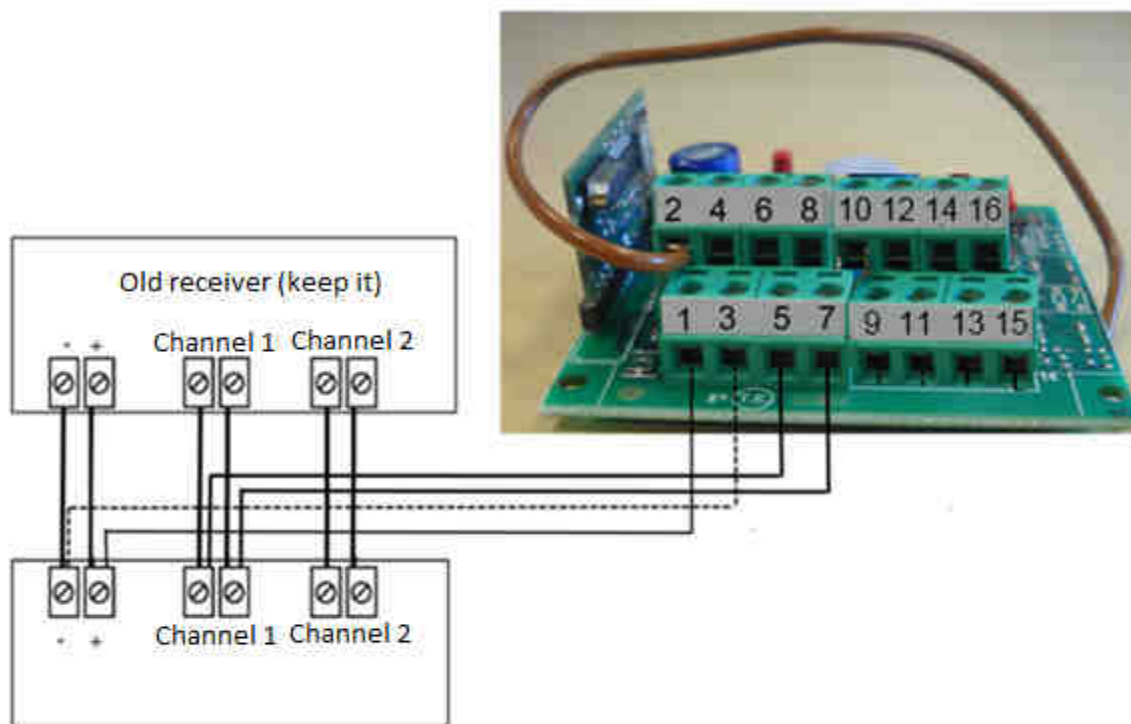


Connection of your receiver:

1. Unplug your motor.
2. Check that your receiver is supplied with a 12V or 24V power supply. If the voltage delivered by the circuit board of your motor is greater (for example, 220V), you will have to install a transformer.
3. Make the following connections with the electrical wires as indicated in the diagram above:
 - Connect channel 1 between terminals 5 and 7 on the receiver (you have to insert the wire in the hole under the screws and then screw them to lock the wire)
 - Connect channel 2 between terminals 6 and 8 on the receiver.
 - The terminals 9 to 16 are specific to the remote control MR4E
 - Connect the terminal + of the motor (or terminal with a tension indication) to terminal 1 on the receiver
 - Connect the terminal – or GMD of the motor to terminal 3 on the receiver
4. Your receiver is connected.

Programming Manual


Programming of the first remote control:

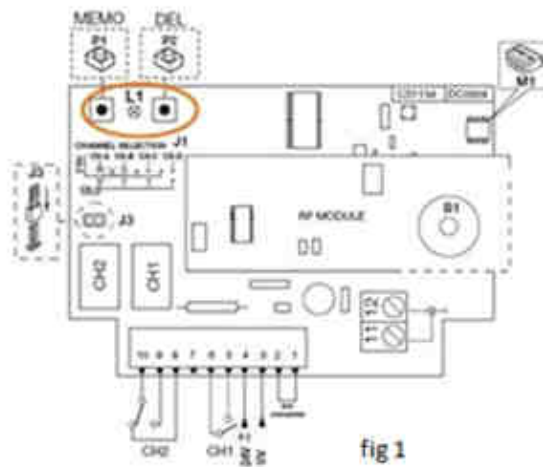

ATTENTION: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button MEMO (fig 1) until the LED light on the receiver illuminates.
3. Press the button you wish to program on your new remote control. Keep it pressed down. The LED light on the receiver blinks and then remains lit constantly.
4. Let the button go.
5. The LED light on the receiver blinks and then turns off.
6. Wait 10 seconds.
7. Your new remote control is programmed.

 Programming of the following remote controls:

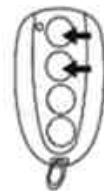

1. Approach your motor so you are standing a few feet away from it.
2. Press both top buttons on the remote control that has already been programmed at the same time (fig 1). The LED light on the remote control that has already been programmed illuminates, turns off, and then illuminates again. Let the buttons go.
3. Immediately press the two top buttons on the already-programmed remote control at the same time. Keep them pressed down. The LED light on your already-programmed remote control blinks slowly and then turns off. Let the buttons go.
4. During the following 10 seconds, press the button you wish to program on your new remote control for 5 seconds. Let it go.
5. Wait 10 seconds.



Programming Manual

6. Your new remote control is programmed.