

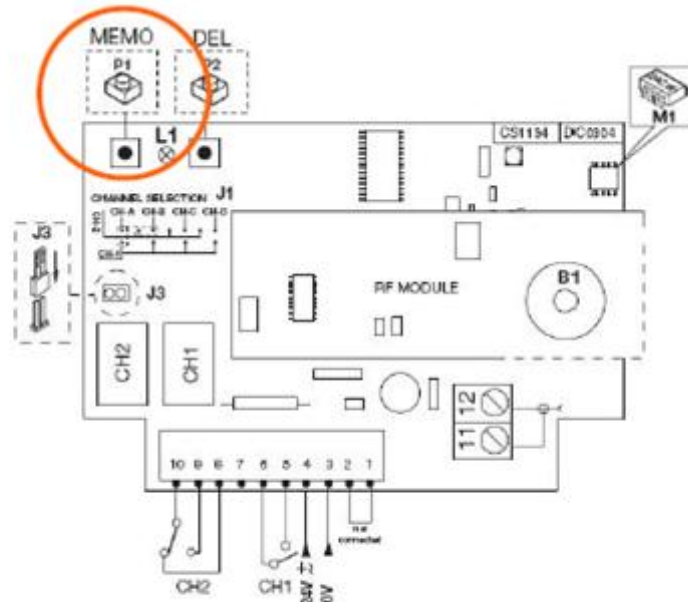
PROGET ETY4F - ETY2F - ETY4B - ETY2B

fig 1

Programming of your new remote control :

1. Open the casing of your receiver. It is located next to your motor
2. On the receiver circuit board, press the programming button MEMO (fig 1). Keep it pressed down. The LED light on the receiver blinks.
3. While keeping pressed down the MEMO button, press the button you wish to program on your new remote control until the LED light of the receiver illuminates fixedly
4. Let the MEMO button go
5. Repeat this procedure for each button you wish to program.
6. Wait 10 seconds.
7. Your new remote control is programmed.