

SEA Head 433 2 – Head 433 4 – Head 868 MHz



Programming of your new remote control:

There are several methods for programming your new remote control

Remote-to-remote programming:

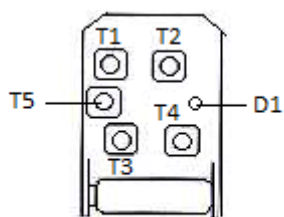


fig 1

1. Approach your motor so you are standing a few feet away from it.
2. Open the casing of your already-programmed remote control.
3. Press the button T5 for 1 second (fig 1). The LED light D1 on your already-programmed remote control illuminates and then turns off. Let the button T5 go.
4. During the following 5 seconds, press the button you wish to program on your new remote control. Let it go.
5. Repeat this procedure for each button you wish to program.
6. Wait 10 seconds.
7. Your new remote control is programmed.

Programming Manual

Receiver-based programming:

ATTENTION: if you keep the programming button of your receiver pressed down too long, you will erase the programming code of all of your remote controls that have already been programmed

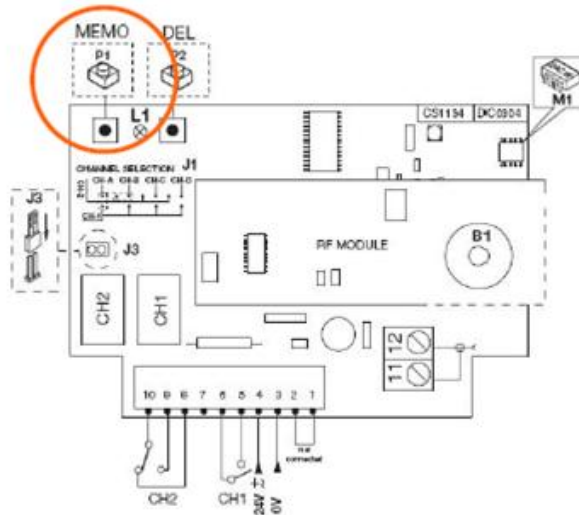


fig 1

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button P1 (fig 1). The LED light on the receiver illuminates. Let the button go.
3. During the following 10 seconds, press a button on your new remote control. Let it go.
4. Wait 10 seconds.
5. Your new remote control is programmed.