

SOMFY Telis Soliris – Telis 1 – Telis 4

Programming of your new remote control:

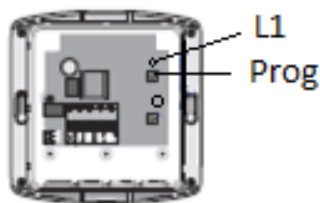


fig 1



fig 2

If the receiver is separated from the motor:

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button for 2 seconds (prog). The LED light on the receiver illuminates (L1) (fig 1).
3. With a sharply pointed object, press the hidden button behind your new remote control (fig 2). The LED light L1 blinks.
4. Wait 10 seconds.
5. Your new remote control is programmed.



fig 1




fig 2

If the receiver is integrated to the motor:

1. Approach your motor.
2. Press both buttons (those with arrows) on your remote control that has already been programmed at the same time (fig 1). Let them go.
3. With a sharply pointed object, press the hidden button located behind your new remote control (fig 2).
4. Wait 10 seconds.
5. Your new remote control is programmed.

To add a remote control

Programming Manual

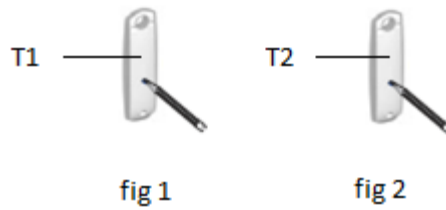

1. Approach your receiver. It is located next to your motor.
2. With a sharply pointed object, press the hidden button located behind your remote control that has already been programmed for 2 seconds (T1, fig 1). The LED light on the receiver illuminates.
3. With a sharply pointed object, press the hidden button located behind your new remote control (T2, fig 2). The LED light on the receiver blinks.
4. Wait 10 seconds.
5. Your new remote control is programmed.