

Chapter 5: Advanced Features

This chapter pertains to features and functions that only the System Master user can access.


This chapter covers User code programming, such as programming new users into the system. This chapter also covers some zone features as well as instructions on how to customize Magellan to suit your needs.

Programming User Codes

User codes allow access to the system. Magellan supports up to 16 User codes where:

- Every user from 002 to 016 is assigned a User code (user 001 is the System Master).
- Your installer can program User codes to be four or six digits in length.
- Each digit can be any value from 0 to 9.

To create or modify a user:

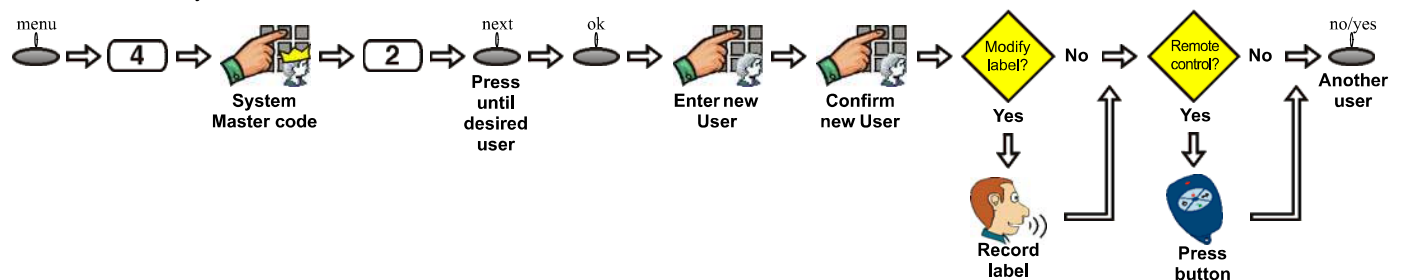

System Master Code (default: 1234)

The System Master code will give you access to all of the features available on your system as well as the ability to add, modify, or delete any users.




It is recommended that you change the default System Master code to a code of your choosing. This will prevent unauthorized users from accessing and modifying options.

Duress User Code

If enabled by your installer, User code 016 can be programmed as a Duress code. If you are forced to arm or disarm your system, entering the user code for User 016 will arm or disarm your system and immediately transmit a silent alarm (Duress code) to your monitoring station.


Deleting a User

When you delete a user, the remote control that is assigned to that user will also be deleted. To delete an existing user:

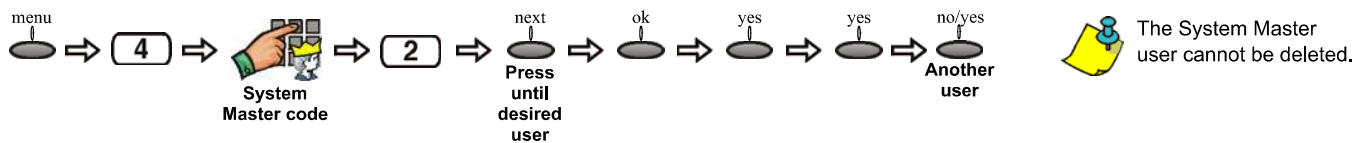


Adding a Remote Control to an Existing User

To add a remote control to a user that is already programmed in the Magellan system:

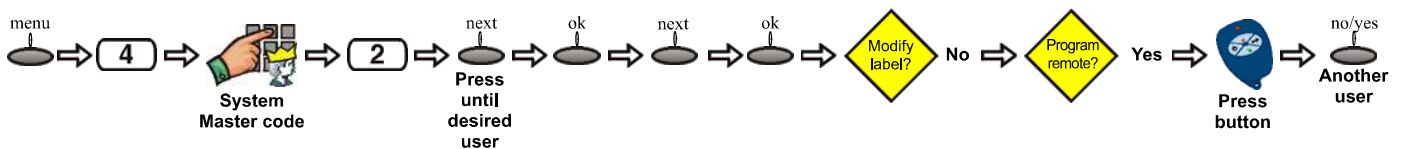


Deleting a Remote Control

To delete a remote control that is already programmed in the Magellan system:

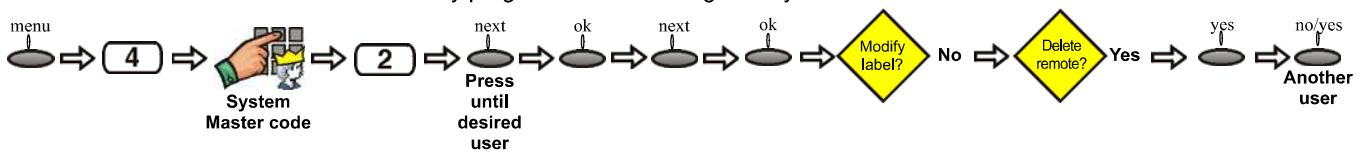


Setting the Language

By default, Magellan is set to English. To change the language:

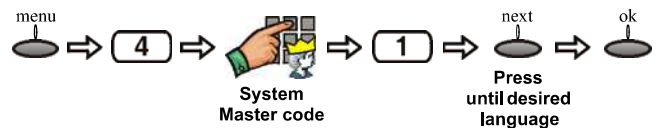

Voice Reporting

Use the Magellan console to call you (or someone you choose) on up to five different telephone numbers and play a personalized voice message (maximum 20 seconds in length) to announce that an alarm has occurred. When in alarm, the system calls to play the pre-recorded message, lists all zones in alarm, and guides you via a menu where you can perform actions including disarming the system. After receiving the message, press the [#] key on the telephone twice to acknowledge and end the message. The unit will call three times (switching between both numbers) or until someone acknowledges the message. To program the Magellan console for voice reporting:

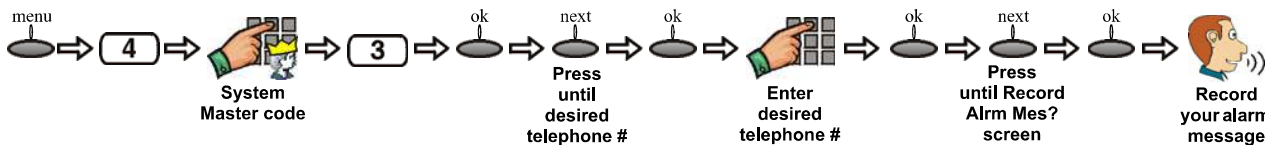

Example: You programmed Magellan's Voice Reporting feature to call your cellular phone and play your recorded message, "There is an alarm occurring at home." Therefore, whenever an alarm occurs, Magellan will call you on your cellular phone and you will hear "There is an alarm occurring at home". Press the [#] key on your cellular phone to acknowledge the message.