

Programming Manual

NICE P1 – W1



Programming with an already programmed remote:

1. Place the new remote control and the already programmed, with a few centimeters distance, side by side.
2. Press on the new remote control the UP button and hold it down.
3. When the LED of the already programmed remote is lit permanently, release the button. The LED of the already programmed remote is now flashing.
4. Press the DOWN button on the already programmed remote. Release the button; the LEDs of both remotes will flash a few seconds.
5. Wait until the LEDs stop flashing.
6. Your new remote control is now programmed.

Programming at the receiver:



7. Open the housing of the receiver. It is located next to your motor or under the motor cover.
8. Press the programming button (see figure, P1) on the receiver board and hold the button until the LED on the receiver lights. Release the button.
9. Press a button on the new remote control. Release the button. The LED on the receiver will turn off.
10. Wait one second. Press the same button on the new remote. Release the button. The LED will flash 3 times.
11. Wait for 10 seconds.
12. Your new remote control is programmed.