

 
Programming Manual

V2 Phoenix – Handy - TSC4

Programming of your new remote control:

There are several types of receivers

First type of receiver:

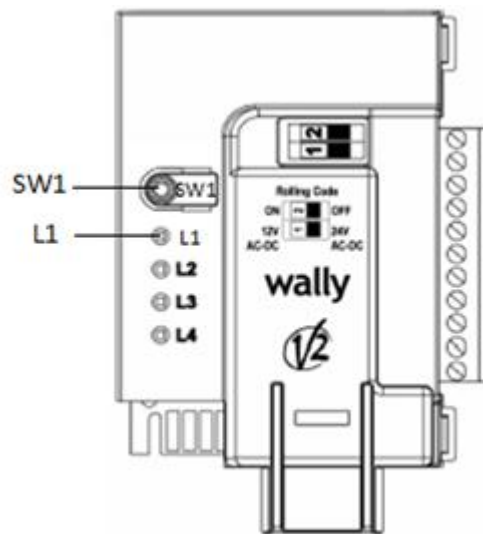


1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board and press the programming button SW1. The LED light L1 on the receiver illuminates.
3. During the following 5 seconds, press the button on your new remote control. Keep it pressed down. The LED light on the receiver blinks once.
4. Let the button go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

Programming Manual


As a replacement for an Astrell or Avidsen (2nd or 3rd type of receiver)

 Second type of receiver:

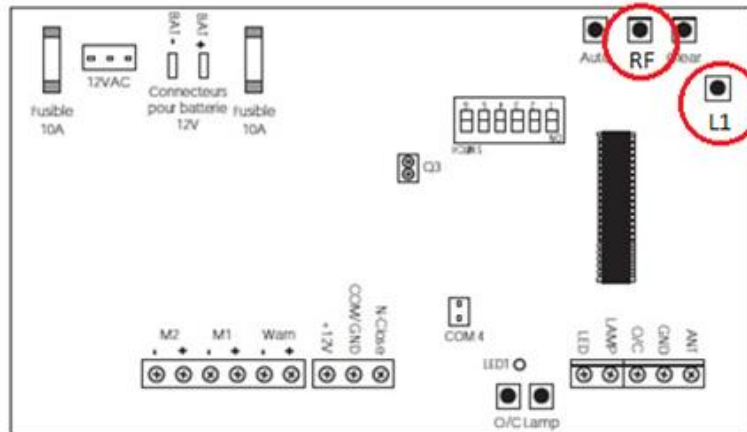

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the button RF. Keep it pressed down. The LED light on the receiver illuminates (L1). Let the button go.
3. During the following 10 seconds, press the button on your new remote control. Let it go. The LED light on the receiver blinks.
4. Wait 10 seconds.
5. Your new remote control is programmed.

 Third type of receive :

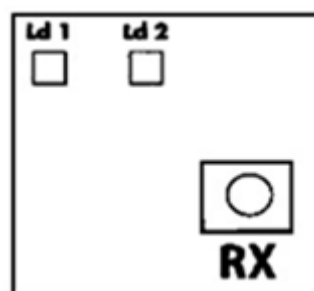

1. Open the casing of your receiver. It is located next to your motor.
2. On the receiver circuit board, press the programming button RX. Keep it pressed down. The LED light on the receiver illuminates (Ld1). Wait 5 seconds. The LED light on the receiver turns off. Let the button go.
3. Press a button on your new remote control. Keep it pressed down. The LED light on your receiver illuminates (Ld 2).
4. Let the button go.
5. Wait 10 seconds.



Programming Manual

6. Your new remote control is programmed.