


NICE Plano 6 - Ergo 6

Programming of your new remote control:

There are several methods for programming your new remote control

Remote-to-remote programming:

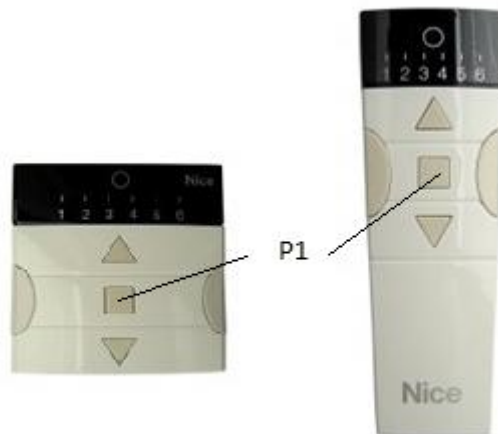

1. Press the square button (P1) on your new remote control. Keep it pressed down. Let the button go when you hear a beep or after at least 8 seconds for a motor that submits information with movements.
2. Slowly press the square button on your already-programmed remote control three times.
3. Press the square button on your new remote control. Keep it pressed down.
4. You hear 3 beeps or the motor makes three movements (depending on the model). Let the button go.
5. Wait 10 seconds.
6. Your new remote control is programmed.

Receiver-based programming:

1. Approach your motor so you are standing a few feet away from it.
2. As soon as the receiver is powered, you hear 2 long beeps or the motor makes two movements (depending on the model).
3. During the following 5 seconds, press the square button on your new remote control for 3 seconds. Keep it pressed down.
4. You hear 3 beeps or the motor makes 3 movements. When you hear the first beep or see the first movement, let the button go.
5. Wait 10 seconds.
6. Your new remote control is programmed.